

Dukkaboard Inset-Tile Drain Cover Item Code 5528

Product Description

The Dukkaboard Inset-Tile Drain Cover is designed for use with Dukkaboard square drain tray formers to create a seamless, elegant shower floor finish. It allows a matching porcelain tile to be inset into the cover, blending perfectly with the surrounding floor. This cover is an optional accessory; it takes the place of the standard pressed drain cover supplied with the shower trap.

Use the Dukkaboard Inset-Tile Drain Cover for a wet-room shower floor installation complemented with a custom matching drain cover.



Key Features

- Provides a customisable, unobtrusive drain finish.
- Compatible with bespoke Dukkaboard tray formers built with a recessed square drain frame (suits horizontal and vertical traps). Not compatible with drain frame risers.



Contact your Dukkaboard representative for technical advice and pricing.

www.dukkaboard.com

020 8778 9000

Materials Required to fit Inset-Tile Drain Cover

- Shower tray former, custom-built to accept this drain cover
- Tile piece cut to 128×128 mm
- Dukkaboard Iso-Koll adhesive or approved 2-part adhesive suitable for bonding to stainless-steel conforming to C2 S1(EN12004:2008) grade
- Tile adhesive for tray former surface; recommend C2 S1(EN12004:2008) grade
- Drain cover removal key, item code 5555 (optional)


Important Notes

- At the time of ordering the tray former to receive this cover, it is important that the use of this cover is noted so that production of tray former aligns, for compatibility.
- Designed for 9mm–12mm porcelain tiles or stable natural stones. Not suitable for mosaics.

Installation Steps

1. Preparation

- Before fitting the tray, ensure the Dukkaboard tray former has its frame recessed into the tray surface.
- Fit the tray according to instructions, as appropriate to the floor type etc. Plan tiling to suit.

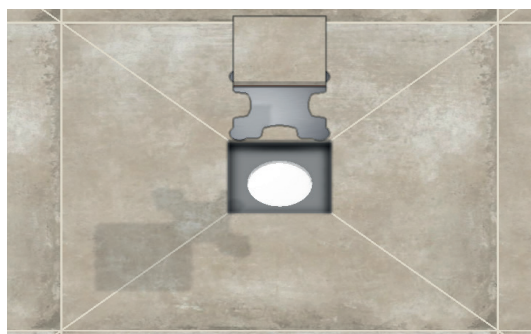


2. Positioning the Cover

- Place the drain cover into the plastic frame moulded into the tray base. The four circular feet sit on the grey plastic frame. The 'mouse ears' detail fit comfortably within the frame edges. This will mean the stainless-steel surface is approximately equal in height to the surrounding tray surface outside the frame.*

*If the stainless-steel cover is not flush with tray - as will be the case for stock tray formers with a raised frame - the cover is still usable on this proviso: The tray surface will require a consistent deeper bed of adhesive to accommodate the tiled cover, while also maintaining the tray former gradients.

3. Tile Cutting & Edge Finishing

- Cut the inset tile piece of exactly 128×128mm from a matching tile. See pictures illustrating the cut tile and how it aligns exactly with the flat-to-flat measurement of 128mm across the tile cover.

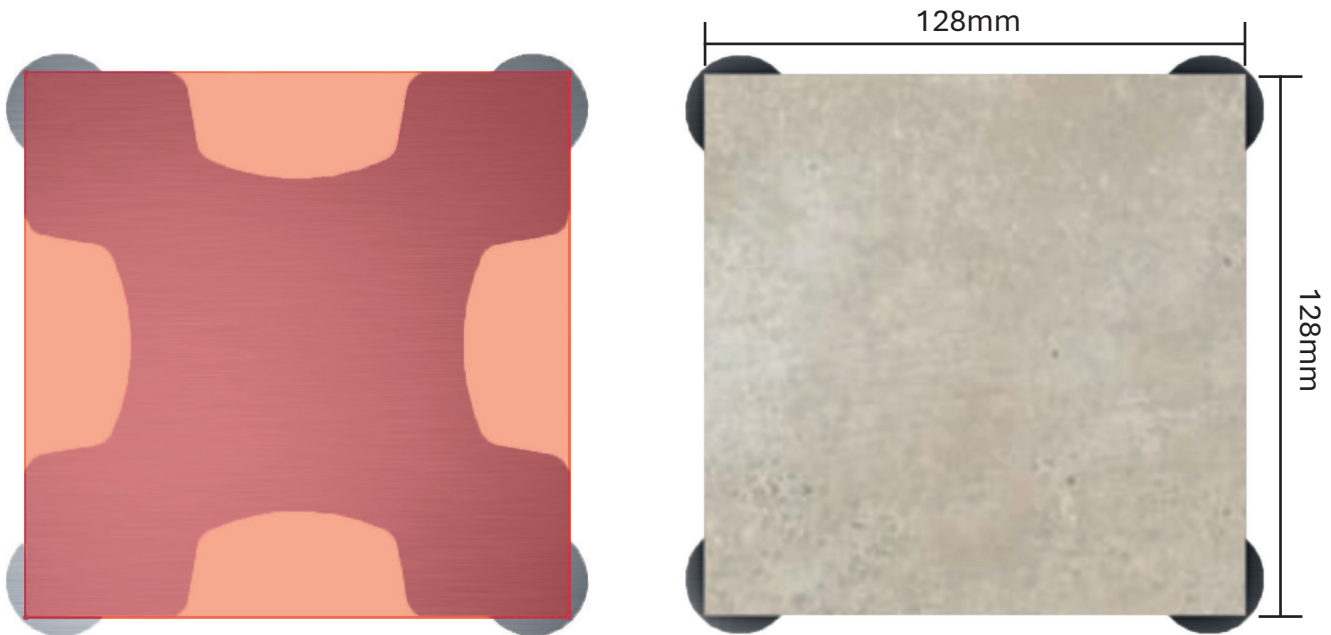

- Fix the cut tile piece using an appropriate bed depth of adhesive to ensure it is flush, to a tolerance of +/- 0.75mm from the surrounding tiled surface.

6. Removal for cleaning

- The drain cover needs to be removed to access the trap for regular cleaning. Use of the drain cover removal key for future removal for cleaning of the trap is recommended.

Safety & Quality Tips

- Always use a single piece of porcelain or stable natural stone.
- Avoid mosaics or weak stone, e.g. those prone to fissures and fracture, fossil-rich materials, travertines etc. An alternative product, Dukkaboard item code 5360 brushed framed inset tile Q-Drain and 5361 polished framed inset tile Q-Drain, is suitable for mosaic. Please ask your sales contact for information.
- Inspect the product at each removal/reinsertion during general use. Discontinue use and report if any undue signs of wear and tear are evident.
- Ensure all edges are smooth for comfort in a predominantly bare-foot environment.



Contact your Dukkaboard representative for technical advice and pricing.

www.dukkaboard.com

020 8778 9000